 


WS-7034U

Wireless 433 MHz

Temperature Station

Instruction Manual



LA CROSSE *tools and technology*
TECHNOLOGY *for home and office*

TABLE OF CONTENTS

Topic	Page
Quick Setup	3-5
Inventory of Contents	6-7
Detailed Setup Guide	
Battery Installation	8
Setting the Time	9-10
Selecting Units of Measurement	10
Features	
Minimum and Maximum Temperatures	11
Resetting Minimum and Maximum Temperatures	12
Adding additional remote temperature sensors (optional)	13-14
Mounting	15-16
Troubleshooting	17-18
Maintenance and Care	19
Specifications	20-21
Warranty Information	22-25

QUICK SETUP

Hint: Use good quality Alkaline Batteries and avoid rechargeable batteries.

1. Have the indoor temperature station and remote temperature sensor 3 to 5 feet apart.
2. Batteries should be out of both units for 10 minutes.
3. Place the batteries into the **remote temperature sensor** first then into the indoor temperature station.
(All remote temperature sensors must be started before the indoor temperature station)
4. **DO NOT PRESS ANY BUTTONS FOR 10 MINUTES.**

In this time the indoor temperature station and remote temperature sensor will start to talk to each other and the

display will show both the indoor temperature and an outdoor temperature. If the indoor temperature station does not display both temperatures after the 10 minutes please retry the set up as stated above. After both indoor and outdoor temperatures are displayed for 10 minutes you can place your remote temperature sensor outdoors and set your time.

The remote temperature sensor should be placed in a dry, shaded area. The remote temperature sensor has a range of 80 feet. Any walls that the signal will have to pass through will reduce distance. An outdoor wall or window will have 20 to 30 feet of resistance and an interior wall will have 10 to 20 feet of resistance. Your distance plus resistance should not exceed 80 ft. in a straight line.

NOTE: Fog and mist will not harm your remote temperature sensor but direct rain must be avoided.

To complete the set up of your indoor temperature station after the 10 minutes have passed please follow the steps on pages 8-9.

INVENTORY OF CONTENTS

1. The indoor temperature station (Figure 1)
2. The remote temperature sensor (TX6U) and mounting bracket. (Figure 2)
3. 3 each, 1/2" Philips screws.
4. One strip of double sided adhesive tape.
5. Instruction Manual and Warranty Card.

Figure 1

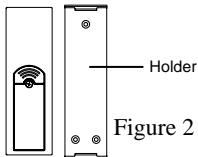 
 


Figure 2

ADDITIONAL EQUIPMENT

 
 
(not included)

1. 1 Philips screwdriver.
2. 2 Fresh AAA Alkaline batteries.
3. 2 Fresh AA Alkaline batteries

DETAILED SETUP GUIDE


Battery Installation

1. Install 2 AA batteries in the remote temperature sensor. Make sure they do not spring free, or start-up problems may occur.
2. Install 2 AAA batteries in the indoor temperature station. **Do not press any buttons for at least ten minutes.**

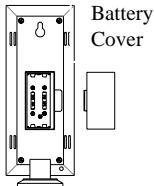

Setting the Time

 1. Press and hold the “*SET*” button for 5 second, “12h” will appear in the TIME LCD.

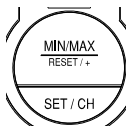

2. Press and release the “*MIN/MAX*” button to select either 12h time (am/pm) or 24h time
3. Press and release the “*SET*” button 2 times, the hour will flash in the upper left corner.
4. Press and release the “*MIN/MAX*” button to set the hours
5. Press and release the “*SET*” button to move to the minute setting
6. Press and release the “*MIN/MAX*” button to set the minutes.
7. Press and release the “*SET*” button to activate the clock.

Note: When in 12h mode, there is only a “PM” display, which appears under “TIME.”

If there is no display here it is AM. Make sure you set the time accordingly.

Selecting Units of Measurement

1. Press and hold the “*SET*” button for 5 second until “12h” or “24h” appears in the TIME LCD.
2. Press and release the “*SET*” button again, “°F” will appear in the TIME LCD.
3. Press and release the “*MIN/MAX*” button to shift between °F and °C.
4. Press and release the “*SET*” button twice to activate settings.

FEATURES

Minimum and Maximum Temperatures

1. Press and release the “*MIN/MAX*” button, “MIN” appears next to the indoor and remote temperatures.

2. The recorded minimum temperature is displayed. The time of the minimum outdoor temperature will also flash.
3. Press the “*MIN/MAX*” button, “*MAX*” appears next to the indoor and remote temperatures.
4. The recorded maximum temperature is displayed. The time of the maximum outdoor temperature will also flash.
5. Press and release the “*MIN/MAX*” button to exit min/max mode.
6. To view optional additional sensors, press and release the “*SET*” button while viewing the minimum or maximum.

Resetting Min and Max Temperatures

To reset both the minimum and maximum temperatures—press and hold the “*RESET/+*” button for 4 seconds.

Adding Additional Remote Temperature Sensors (optional)

The WS-7034U is able to receive signals from 3 different remote temperature sensors. Following are some brief instructions for the basic set-up of remote temperature sensor units with the WS-7034U. These extra remote temperature sensors can be purchased through the same dealer as this unit, or by contacting La Crosse Technology directly. A TX6U will monitor temperature only, a TX3U will monitor temperature and display the temperature on its LCD, and the TX3UP will monitor the temperature of water or soil via a probe.

When setting up multiple remote temperature sensors, it is important to remove the batteries from all existing units in operation, then to insert batteries first into all the remote temperature sensors. Second install batteries into the

indoor temperature station and do not press any buttons for ten minutes. Transmission problems will arise if this is not done correctly.

To view the temperature of a different remote temperature sensor unit, press and release the “*SET/CH*” button. A shift from one number to the next should be observed in the OUTDOOR LCD.

MOUNTING

Note: To achieve a true temperature reading, avoid mounting in direct sunlight. We recommend that you mount the remote temperature sensor on a North-facing wall. The sending range is 80ft; obstacles such as walls, concrete, and large metal objects will reduce the range. Place both units in their desired location before permanently mounting.

Remote Temperature Sensor

1. Remove the mounting bracket from the remote temperature sensor.
2. Mount the bracket in the desired location with either screws or adhesive tape.
3. Reattach the remote temperature sensor into mounting bracket.

Indoor Temperature Station

The indoor temperature station comes with the table stand already mounted. If you wish to use the table-stand all that is required is to place the indoor temperature station in an appropriate location.

1. To wall mount the indoor temperature station first remove the table stand.
2. Next insert an appropriate screw in your desired location.
3. Using the integrated hanging hole on the back of the unit, slip indoor

temperature station over the screw and pull down to secure.

TROUBLESHOOTING

***NOTE:** For problems not solved, please contact La Crosse Technology via e-mail or phone, or visit our website, www.lacrossetechnology.com*

Problem: The LCD is faint

Solution: Replace batteries

Problem: No outdoor temperature is displayed.

Solution:

1. Remove all batteries, reinsert into remote temperature sensor first, then into the indoor temperature station.
2. Place remote temperature sensor closer to the indoor temperature station.
3. Be sure all batteries are fresh.
4. Place remote temperature sensor and indoor temperature station in position

so the straight-line signal is not passing through more than two or three walls.

Problem: Temperatures do not match if units are placed next to each other.

Solution:

Each temperature sensor is manufactured to be accurate to within 1 degree plus or minus and under normal conditions, so two sensors could be as much as 2 degrees different.

However, the difference can be exaggerated further because the sensors are designed for different working environments. The indoor sensor is less responsive to ambient air currents because of the shielding effect of the display's case. In addition, the case can act as a heat sink to absorb and store heat from external sources (i.e. handling of the case or radiant heat). Also, the much greater range of the outdoor temperature sensor requires a different calibration curve than the indoor range. Error is usually greater at the extreme ends of a range, making it harder to compare different ranges with different curves. Under non-laboratory conditions, it

is difficult to compensate for the above factors and obtain an accurate comparison.

MAINTENANCE AND CARE INSTRUCTIONS

- Extreme temperatures, vibration, and shock should be avoided to prevent damage to the units.
- Clean displays and units with a soft, damp cloth. Do not use solvents or scouring agents; they may mark the displays and casings.
- Do not submerge in water.
- Do not subject the units to unnecessary heat or cold by placing them in the oven or freezer.
- Opening the casings invalidates the warranty. Do not try to repair the unit. Contact La Crosse Technology repairs.

SPECIFICATIONS

Transmitting Frequency	433MHz
Measuring Temperatures	
Indoor Temperature Station	32°F to 156.2°F with 0.2 °F resolution. (0°C to 69.0°C with 0.1°C resolution).
Remote Temperature Sensor	-21.8 °F to 156.2°F with 0.2°F resolution. (-29.9°C to 69.0°C with 0.1°C resolution).
Temp accuracy	+/- 1°F (+/- .5°C).
Transmitting range	Maximum 80 feet (25m) open space.
Temperature check	
Indoor	Every 10 seconds.
Outdoor	Three times in 10 minutes.
Batteries—(Alkaline recommended)	
Remote Temperature	2 x AA, 1.5V

Sensor	
Indoor Temperature Station	2 x AAA, 1.5V

Dimensions: (L x W x H)	
Indoor Temperature Station	2.36 x .88 x 5.90 in. (excluding table stand) (60 x 22.5 x 150 mm).
Remote Temperature Sensor	2.32 x 0.86 x 2.55 in. (59 x 22 x 65 mm).
Battery life	Approximately 1 year.

WARRANTY INFORMATION

La Crosse Technology provides a 1-year warranty on this indoor temperature station. Contact La Crosse Technology immediately upon discovery of any defects covered by this warranty.

Before sending the indoor temperature station in for repairs, contact La Crosse Technology. The indoor temperature station will be repaired or replaced with the same or similar model.

This warranty does not cover any defects resulting from improper use, unauthorized repairs, faulty batteries, or the indoor temperature stations inability to receive a signal due to any source of interference.

LA CROSSE TECHNOLOGY WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS INDOOR TEMPERATURE STATION. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC INFORMATION. THIS PRODUCT IS NOT A TOY. KEEP OUT OF CHILDREN'S REACH.

This warranty gives you specific legal rights. You may also have other rights specific to your State. Some States do not allow the exclusion of consequential or incidental damages therefore the above exclusion of limitation may not apply to you.

For warranty work, technical support, or information contact:

La Crosse Technology
2809 Losey Blvd. S.
La Crosse, WI 54601

Phone: 608.782.1610

Fax: 608.796.1020

e-mail:

support@lacrossetechnology.com

(warranty work)

sales@lacrossetechnology.com

(information on other products)

web:

www.lacrossetechnology.com

FCC DISCLAIMER

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Freq. 433.92 MHz

La Crosse Technology

Made in China

WS-7034U

**FCC ID: OMO-01RX (Receiver), OMO-01TX
(transmitter)**

**THIS DEVICE COMPLIES WITH PART 15
OF THE FCC RULES. OPERATION IS
SUBJECT TO THE FOLLOWING TWO
CONDITIONS:**

- 1. THIS DEVICE MAY NOT CAUSE
HARMFUL INTERFERENCE, AND**
- 2. THIS DEVICE MUST ACCEPT
INTERFERENCE RECEIVED, INCLUDING
INTERFERENCE THAT MAY CAUSE
UNDESIRE OPERATION.**